


Important:	1. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
	2. Check the contents of kit before commencing fitment and report any discrepancies.
	3. Place these instructions in the vehicle's glove box after installation is complete.
	4. These instructions must be followed for warranty to be upheld.

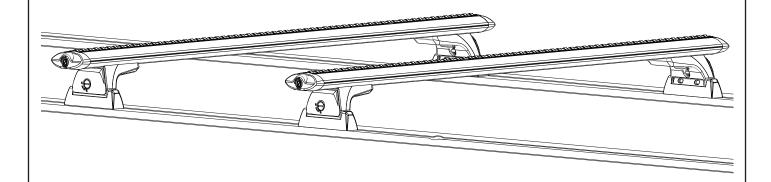

Important Information

Load ratings:

Maximum permissible load for system is up to 95kg per pair of crossbars. When crossbars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit. Although the crossbars are tested and approved to AS1235-2000, off-road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

Please refer to your vehicle manufacturers handbook for the maximum roof loading allowable for your make and model vehicle. Always use the lower of the two figures

On Road Cargo Allowance	Off Road Cargo Allowance	Roof Allowance	Rack Weight
95kg / 209lb	63kg / 138lbs	100kg / 220lbs	5kg / 11lbs

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are re-fitted.

Make sure to fasten your load securely. Ensure all loads are evenly distributed and centre of gravity is kept as low as possible. Use only non-stretch fastening ropes or straps. Clean roof prior to installation.

Caution: The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

Please remove crossbars when putting vehicle through an automatic car wash.

Please remove Batwing awning and crossbars when using an automatic carwash.

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 22 Hanson Pl, Eastern Creek NSW 2766. Australia


[02] 8846 1900

rhinorack.com

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.


Doc No: R474 Issue No: Issue Date: 06/07/2023

Quick Mount Track Legs RLT600 Crossbars must be spaced between 700mm - 1000mm [27 9/16" - 39 3/8"] OR to roof top tent manufacturer's specification. S606 to be used.

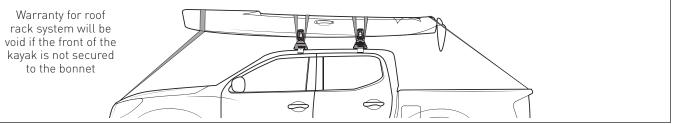

Parts List


Item	Component Name	Qty
1	M6 24x24x4 Nut	4
2	Track Leg Body	4
3	M6x16x1.6 Flat Washer	4
4	M6 Spring Washer	12
5	M6x20 Socket HD	4
6	Track Leg Base Cover	4
7	Track Leg Base	4
8	5mm Allen Key	1
9	Track Leg Lockable Cover	4
10	M6x16 Button Security Screw	8
11	M6x12.5 Flat Washers	8
12	M6 24x21x4 Nut	8
13	Track Leg Grommet	4
14	Instructions	1

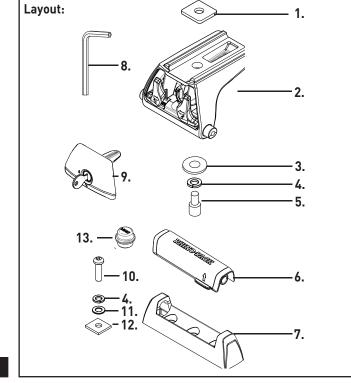


Tools Required: Allen Key (provided)


Metal Key (provided)

Instructions

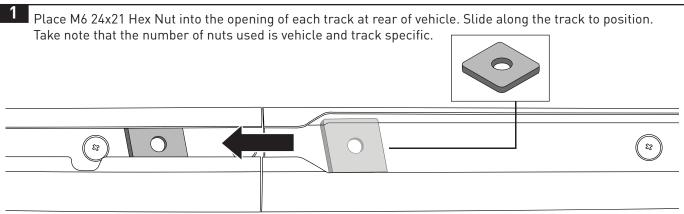



Place the mounting plate onto the track. Fix in place with security screws, spring and flat washers. Note that the amount of fixing hardware used is dependant on the previous step and vehicle requirements.

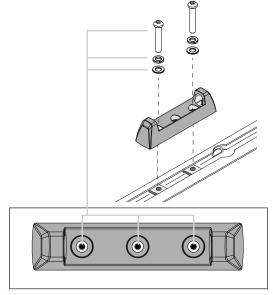


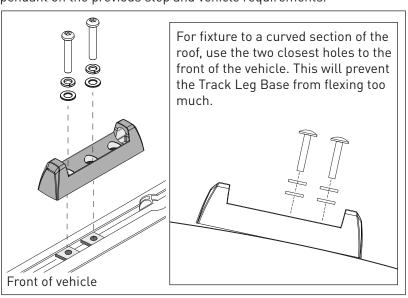



Prepare the Leg for installation as follows: 1 - Remove cover plate. 2 - Locate and Pinch locking levers together. 3 - With levers pinched together, push them backward into a locked position within the leg cavity.

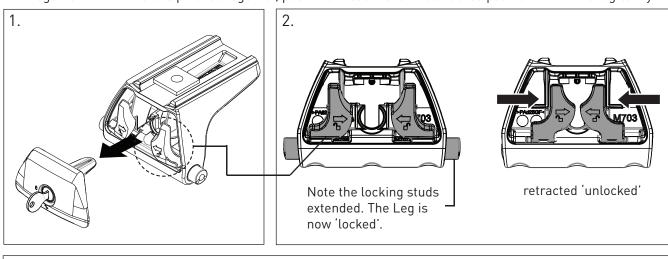


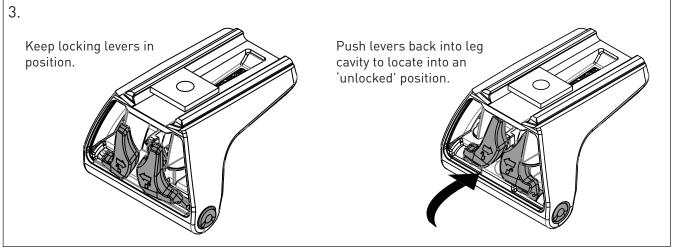


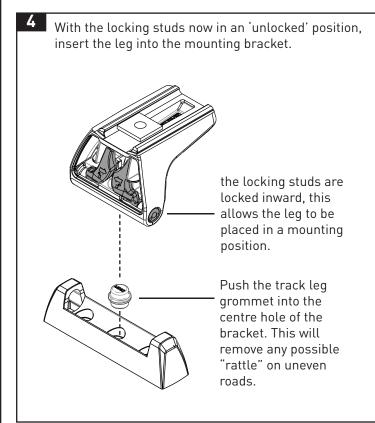


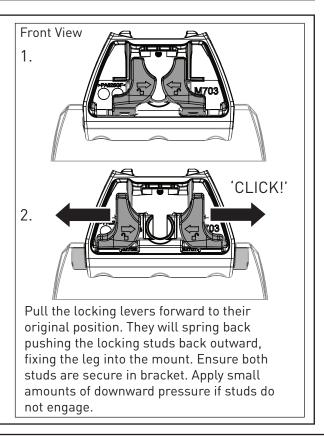


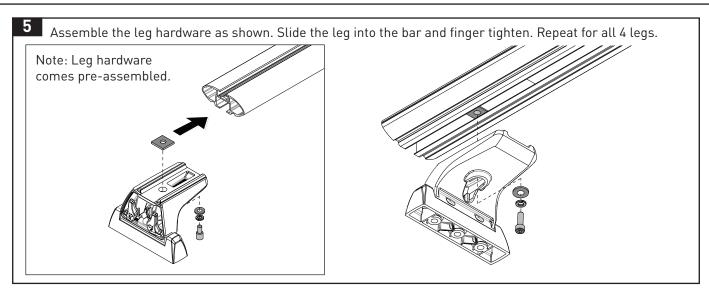


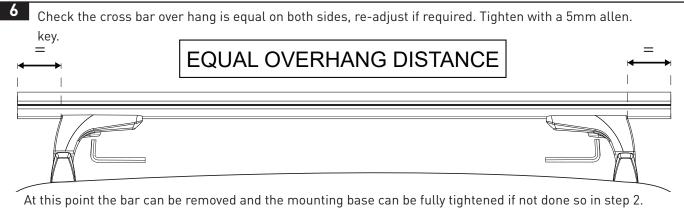

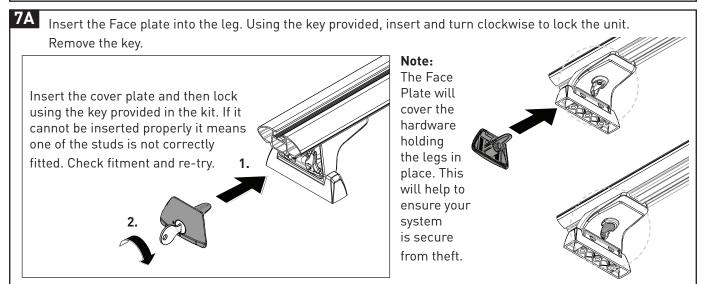

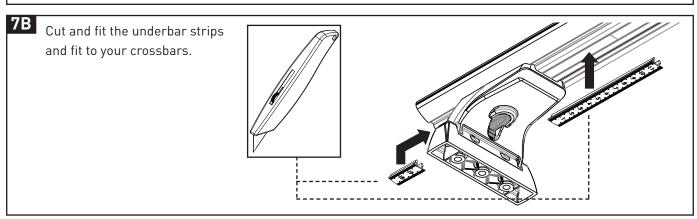


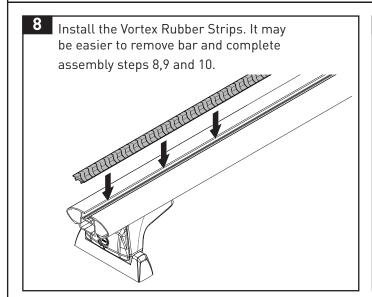


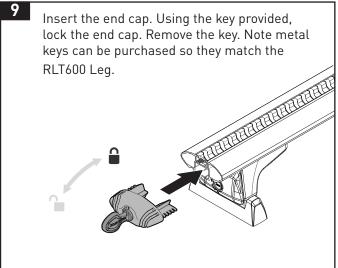


Removing the Bars

Remove the cover plate from the legs. Squeeze the locking levers together and push them backward into the leg cavity. Assistance may be required.

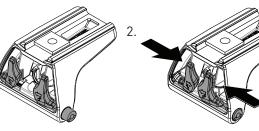

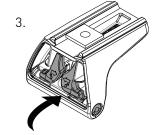

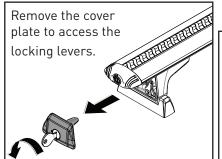

Note:

1.

Use two hands to push in the locking levers if tight. Do not used a screw driver as this may damage the levers.

