


Batwing Compact Tapered Zip Extension with Door - 33110

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 10 mins

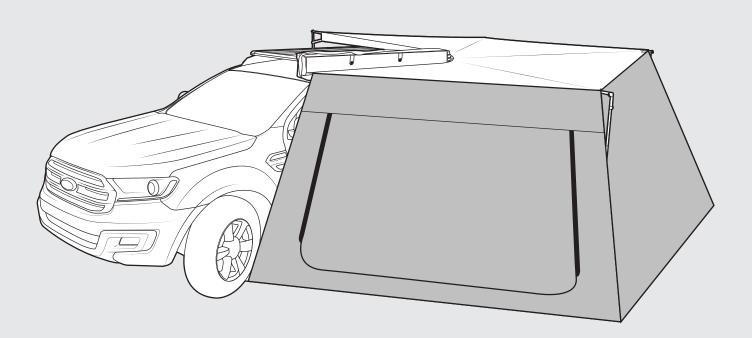


Rhino-Rack 22A Hanson Pl, Eastern Creek NSW 2766, Australia (02) 8846 1900 rhinorack.com

Document No: 520-RFI-00013 Issue No: 01 Issue Date: 31/03/2021


33110 Instructions

Parts List

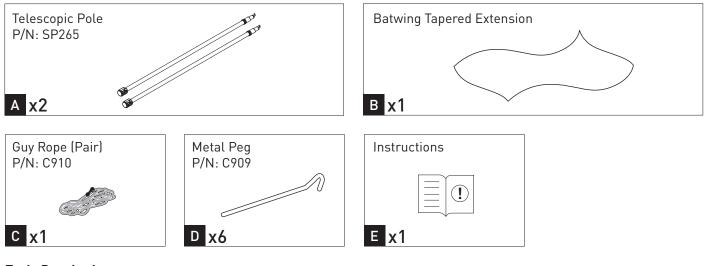

Tools Required T1 - Rubber Mallet

33110 Instructions

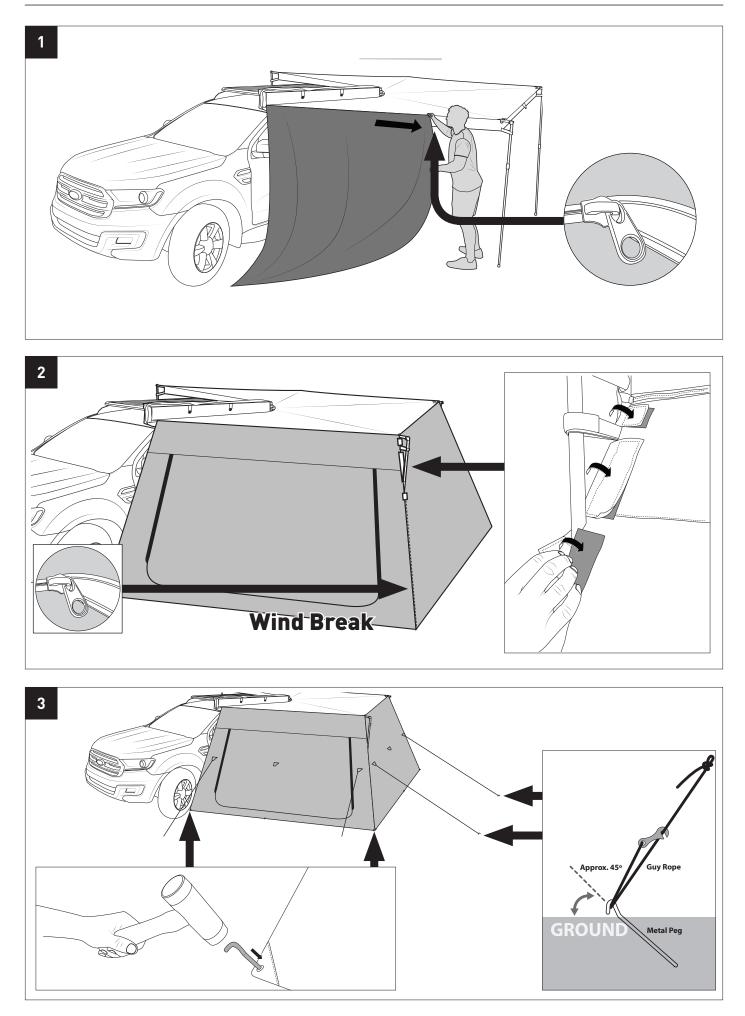

33110 Instructions

